

· the security bar is in the correct position

for its use.

· battery is not leaking.

The battery must be replaced if it is leaking

· no body panels on tractor unit or trailer are loose and in danger of falling off; and

· no landing legs, where fitted, are likely to fall from the vehicle

· all dashboard warning lamps work correctly

(e.g. the ABS warning lamp, full headlamp

warning lamp, parking brake warning lamp, etc.).

applicable); and

If leaks are detected that aren't fuel or oil, trace the

cause (i.e. power steering fluid, water, etc.).